



Flashing Application Instructions

IMPORTANT! READ ALL INSTRUCTIONS IN ENTIRITY BEFORE PROCEEDING WITH INSTALLATION OF PRODUCT

Follow all local building codes and practices during installation. Elevate Windows and Doors LLC does not accept responsibility of its product due to water or air leakage resulting in damages surrounding the exterior window at the head, sill, jamb or otherwise as a result of faulty installation practices. All Elevate Windows and Doors LLC products are subject to quality control prior to shipment from the manufacturing facility. Poor performance in operation of the unit or otherwise as a result of poor installation methods is not the responsibility of Elevate Windows and Doors LLC and may result in void of warranty. The following instructions are based on best practices in accordance with industry standards of recommended installation methods.

- 1) Apply flashing to the boundary of all four corners of the rough opening.
- 2) Apply flashing to the interior of the sill and six inches up the jambs with an overlap of the boundary flashing.
- 3) Cut bottom corners of flashing at a 45 degree angle to navigate bottom corners of rough opening if need be.
- 4) Add an extra piece of flashing to completely cover bottom if need be.

Note: Flashing is required to be at least four inches in width.